

VORTEX
THE FORCE OF OPTICS®

VIPER® HS LR™
RIFLESCOPE



RIFLESCOPE MANUAL

First Focal Plane Reticle

The Vortex[®] Viper[®] HS LR[™] Riflescopes

The Vortex[®] Viper[®] HS LR[™] riflescopes are intended for dedicated long range hunters. Using a specially designed uncapped, rapid travel elevation turret with our CRS zero stop, this rifle scope accommodates the unique needs of hunters who prefer to “dial in” elevation adjustments for long range shots.

The Viper HS LR series riflescopes also provide an ideal platform for the optional Vortex TMT custom turret caps. Visit our website, www.vortexoptics.com, for more information on the TMT caps.



RIFLESCOPE OPTIONS

The Focal Plane

All riflescopes reticles can be termed either first focal plane (FFP) or second focal plane (SFP), depending upon their internal location within the rifle scope. This model features the first focal plane design.

First Focal Plane Reticles

First focal plane (FFP) reticles are located near the windage and elevation turrets in front of the image-erecting and magnifying lenses. This style of reticle will visually grow and shrink as you change the magnification. The main advantage of an FFP reticle is that the reticle subextensions used for ranging, holdovers, and wind drift corrections are consistent at all magnifications. The reticle is heavier at higher magnifications and finer at lower magnifications.

RIFLESCOPE ADJUSTMENTS

Reticle Focus

The Viper HS LR rifle scope uses a *fast focus* eyepiece designed to quickly and easily adjust the focus on the rifle scope's reticle.

To adjust the reticle focus:

1. *Look through the rifle scope at a blank white wall or up at the sky.*
2. *Turn the eyepiece focus knob in or out until the reticle image is as crisp as possible.*



Adjust the reticle focus

Note: Try to make this particular adjustment quickly, as the eye will try to compensate for an out-of-focus reticle.

Once this adjustment is complete, it will not be necessary to re-focus every time you use the rifle scope. However, because your eyesight may change over time, you should re-check this adjustment periodically.

Warning

Looking directly at the sun through a rifle scope, or any optical instrument, can cause severe and permanent damage to your eyesight.

Windage and Elevation Adjustments

The Vortex Viper HS LR rifle scope incorporates precision finger adjustable elevation and windage dials with audible clicks.

To make adjustments:

1. Turn the adjustment knob in the appropriate direction: Up/Down or Left/Right as indicated by the arrows.
2. Following the directional arrows, turn the knobs in the direction you wish the bullet's point-of-impact to go to.



Elevation Knob

Windage Knob

Note: After sight-in, you can re-align the zero marks on the turret knobs with the reference dots if you wish (see **Indexing Adjustment Dials with Zero Reset** on page 15). Replace outer covers when done.

MOA Adjustments

The Viper HS LR riflescopes use finger adjustable elevation and windage turrets with scales measured in minutes of angle (MOA). MOAs are a unit of arc measurement which equals 1.05 inch for each 100 yards. Examples: 2.1 inches @ 200 yards, 3.15 inches @ 300 yards, etc.

The tactical-style elevation turret is designed to provide a high travel range along with rapid adjustment ability. Each click will provide $\frac{1}{2}$ MOA of reticle movement (approximately $\frac{1}{2}$ -inch @ 100 yards).

The windage turret uses a standard design with an external cap. Each click will provide $\frac{1}{4}$ MOA of reticle movement (approximately $\frac{1}{4}$ -inch @ 100 yards).

Turret Rotation

Vortex Viper HS LR riflescopes incorporate Vortex's patented Radius Bar to visually assist in keeping track of turret rotations. The Radius Bar provides a quick visual reference that allows the shooter to confirm:

- Knob orientation is correct and has not shifted as a result of accidental contact.
- Knob orientation is at the zero point when using the CRS feature.
- By watching the position of the bar while making elevation adjustments, the shooter is able to quickly track full, half and quarter rotations.



Radius Bar

To get these benefits from the Radius Bar, the "0" mark on the turret must be indexed with the zero reference line on turret post (see **Setting the CRS Stop and Indexing Elevation Knob** on page 14).

Variable Power Adjustments

To change the magnification, turn the magnification ring to the desired level. The Vortex fiber optic magnification indicator will provide a low light reference for magnification level.



Magnification Scale

MagView Indicator

Customizable Rotational Stop (CRS)

Viper HS LR riflescope turrets incorporate the unique CRS rotation stop feature. After the rifle is sighted in, the design of the CRS allows a shooter to quickly and easily return to an original zero point when using the elevation turret to dial-in temporary bullet drop corrections.

The CRS feature is particularly useful when dialing large multi-revolution elevation corrections. Without this feature, the shooter must pay very careful attention when dialing these large corrections. If the shooter loses track of the number of revolutions, the original zero point may become lost when returning the adjustment. Viper HS LR riflescopes equipped with the CRS allow the elevation dial to be quickly spun back to original zero without having to carefully count revolutions or clicks.

Once the CRS shims are installed after sight-in, the elevation dial will stop turning shortly past the original zero point when being returned (turning clockwise direction) from a temporary elevation adjustment. The shooter can then turn the elevation knob a partial turn in a counter-clockwise direction until the zero reference and radius bar are correctly aligned—achieving the original zero point.



CRS Shims

See CRS shim installation in the **Bore Sighting** and **Final Range Sight-in** sections on pages 12–13 for more information.

Using the Side Focus

Viper HS LR riflescopes use a side focus adjustment which provides maximum image sharpness and eliminates parallax error.

Setting the side focus:

1. Be sure the reticle is correctly focused (see **Reticle Focus** on page 7).
2. Turn the side focus knob until the target image is as sharp as possible. The yardage numbers referenced on knob should closely match the actual yardage to the target.



Adjust the side focus knob

3. Check for parallax error by moving your head back and forth while looking through the scope. The focus is correct if there is no apparent shift of the reticle on the target. If you notice any shift, adjust the focus knob slightly until all shift is eliminated.

Parallax is a phenomenon that results when the target image does not quite fall on the same optical plane as the reticle within the scope. When the shooter's eye is not precisely centered in the eyepiece, there can be apparent movement of the target in relation to the reticle, which can cause a small shift in the point of aim. Parallax error is most problematic for precision shooters using high magnification.

RIFLESCOPE MOUNTING

To get the best performance from your Viper HS LR rifle scope, proper mounting is essential. Although not difficult, the correct steps must be followed. If you are unsure of your abilities, it would be best to use the services of a qualified gunsmith.



Rings and Bases

Mount an appropriate base and matching rings to your rifle according to the manufacturer's instructions. The Vortex Viper HS LR riflescopes require 30 mm rings.

Use the lowest ring height that will provide complete clearance of scope and rifle—avoiding any contact with barrel, receiver, bolt handle or any other part of the rifle. A low mounting height will help assure proper cheek weld, aid in establishing a solid shooting position, and promote fast target acquisition.

Eye Relief and Reticle Alignment

After installing the bottom ring halves on the mounting base, place the rifle scope on the bottom ring halves and loosely install the upper ring halves. Before tightening the scope ring screws, adjust for maximum eye relief to avoid injury from recoil:

1. Set the rifle scope to the middle of its magnification range.
2. Slide the rifle scope as far forward as possible in the rings.
3. While viewing through the rifle scope in a normal shooting position, slowly slide the rifle scope back towards your face. Pay attention to the field of view. Stop sliding the rifle scope back as soon as you see the full field of view.
4. Without disturbing the front-back placement, rotate the rifle scope until the vertical crosshair exactly matches the vertical axis of the rifle. Use of a reticle leveling tool, a weight hung on a rope, flat feeler gauges, or a bubble level will help with this procedure.

After aligning the reticle, tighten and torque the ring screws down per the manufacturer's instructions.

Using bubble levels to square the rifle scope to the base.



Bore Sighting

Initial bore sighting of the rifle scope will save time and money at the range. This can be done in a number of ways. A mechanical or laser bore sighter can be used according to the manufacturer's instructions. On some rifles, bore sighting can be done by removing the bolt and sighting through the barrel.

To visually bore sight a rifle:

- Place the rifle solidly on a rest and remove the bolt.
- Sight through the bore at a target approximately 100 yards away.
- Move the rifle and rest until the target is visually centered inside the barrel.
- With the target centered in the bore, make windage and elevation adjustments until the reticle crosshair is also centered over the target.



Visually bore-sighting a rifle.

Final Range Sight-In and CRS Stop-Set

After the rifle scope has been bore-sighted, final sight-in and CRS stop-set should be done at the range. Sight in and zero the rifle scope at the preferred distance using the exact ammunition expected to be used while shooting. 100 yards is the most common zero distance, although a 200 yard zero may be preferred for long range applications.

Be sure the reticle is in focus (see *Reticle Focus* on page 5) and set the side focus adjustment to match the distance being used for sight-in:

1. Following all safe shooting practices, fire a three-shot group as precisely as possible.
2. Next, adjust the reticle to match the approximate center of the shot group (see *Windage and Elevation Adjustments* on page 6).

Note: If the rifle is very solidly mounted and cannot be moved, simply look through the scope and adjust the reticle until it is centered on the fired group.

3. Carefully fire another three-shot group and see if the bullet group is centered on the bullseye.

This procedure can be repeated as many times as necessary to achieve a perfect zero.

Setting the CRS Stop and Indexing Elevation Knob

After obtaining a satisfactory zero, the CRS stop can be set using the following technique:

1. Loosen the three turret cap retaining screws on the elevation turret. Gently pull the turret cap straight up and off of the turret post—being careful not to rotate the turret post.
2. Slide the CRS shims on the center section of the turret post below the V-grooved part.

Place CRS shims in this groove.



Alternate shim installation direction 180 degrees with each shim.



Use as many shims as necessary to completely fill up the space. Do not try to force in a last shim once the clearance is very close.

3. After filling the center gap on the post with shims, replace the elevation cap.

4. Align the turret cap so the “0” mark on the cap matches up with the “0” reference line on the turret post. Again, be sure not to rotate the actual turret mechanism in the process.


5. Re-tighten the retaining screws, but do not over-tighten. Use of thumb and forefinger on the short end of the hex wrench will provide sufficient force.

Indexing Windage Dial with Zero Reset


Viper HS LR riflescopes feature a windage dial that will allow you to re-index the zero indicator after sight-in without disturbing your settings. This allows you to quickly return to your original zero if temporary windage corrections are used in the field. Index the windage dial in this way:

1. Remove the outer cap and pull the adjustment dial outward against the spring tension until it stops.
2. With the dial pulled fully outwards, rotate the dial to reposition the zero mark on the index line.

Remove the outer cap and expose the turret dial.

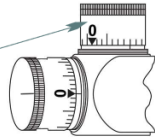

Grasp turret dial and pull outward. Then, rotate dial until the etched zero mark aligns with the indicator line on scope body.

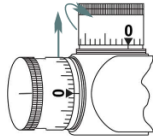

3. Release the dial, allowing it to return to the normal inward position.

Using the CRS Zero Stop

Once the CRS shims are installed, the elevation dial will stop turning shortly past the original zero point when being returned (turning clockwise direction) from a temporary elevation adjustment.



Point at which the knob stops turning.

Turn the elevation knob a partial turn in a counter-clockwise direction until the Radius Bar is correctly aligned with scope axis and zero marks match. This setting will match the original zero point.



Correct alignment for zero point.

If re-zeroing at a future time, be sure to remove all CRS shims before sight-in.

MAINTENANCE

Cleaning

The fully waterproof and fogproof Viper HS LR rifle scope requires very little routine maintenance other than periodically cleaning the exterior lenses. The exterior of the scope may be cleaned by wiping with a soft, dry cloth.

When cleaning the lenses, be sure to use products, such as the Vortex Fog Free cleaning products or LensPen, that are specifically designed for use on coated optical lenses.

- Be sure to blow away any dust or grit on the lenses prior to wiping the surfaces.
- Using your breath, or a very small amount of water or pure alcohol, can help remove stubborn things like dried water spots.

Lubrication

All components of the Viper LR riflescopes are permanently lubricated, so no additional lubricant should be applied.

Note: Other than removing the turret caps, do not attempt to disassemble any components of the rifle scope. Disassembling of rifle scope may void warranty.

Storage

If possible, avoid exposing your Vortex rifle scope to direct sunlight or any very hot location for long periods of time.

TROUBLESHOOTING

Sighting-in Problems

Many times, problems thought to be with the scope are actually mount problems. Be sure that correct base and rings are being used in the correct orientation, and that the base screws and rings are tight. Insufficient windage or elevation adjustment range may indicate problems with rings, base, base alignment, base mount holes drilled in the rifle's receiver, or barrel/receiver alignment.

Check for Correct Base and Ring Alignment

- Roughly center the reticle by adjusting both windage and elevation turrets to the mid point of their travel ranges.
- Attach bore sighter, or remove bolt and visually boresight rifle.
- Look through the scope. If the reticle appears way off center on the boresighter image or when compared to the visually centered target when looking through rifle's bore, there may be a problem with the bases or rings being used. Confirm that correct base and rings are being used—and in the proper orientation.

Tips for Solving Bullet Grouping Problems

- Maintain a good shooting technique and use a solid rest.
- Check that all screws on rifle's action are properly tightened.
- Be sure rifle barrel and action are clean and free of excessive oil or copper fouling.
- Check that rings are correctly torqued per the manufacturer's instructions.
- Some rifles and ammunition don't work well together—try different ammunition and see if accuracy improves.

THE VIP WARRANTY

We build optics based on our commitment to your absolute satisfaction. That's why Vortex products are unconditionally guaranteed and we make this Very Important Promise to you—a Very Important Person.

Rest assured that in the event your Viper HS LR rifle scope becomes damaged or defective, Vortex Optics will repair or replace the rifle scope at no charge to you.

Call Vortex Optics at 800-426-0048 for prompt, professional, and friendly service.

Vortex Optics
2120 West Greenwood Drive
Middleton, WI 53562
service@vortexoptics.com

Visit www.vortexoptics.com for more information. Canadian customers may visit www.vortexcanada.net for customer service information.

Note: The VIP warranty does not cover theft, loss, or deliberate damage to the product.

Vortex Optics believes strongly in responsible, ethical hunting and a word should be said about long range shooting at game. Although riflescopes, like the Vortex HS LR series, can make long distance shots much easier, there are still many other variables, such as wind, affecting every shot. It is important for hunters shooting at long distances to learn their personal effective range, particularly in windy conditions, and to not shoot beyond those distances at game. Please be responsible—the keys are knowing your rifle, ammunition and your own abilities!



UNLIMITED
UNCONDITIONAL
Lifetime Warranty

VORTEX
THE FORCE OF OPTICS®

VIPER® HS LR™
RIFLESCOPE

WWW.VORTEXOPTICS.COM



#VHS-LR-43001-12B

© Vortex Optics USA